

Marshall

MASTER VOLUME AND LEAD AMPLIFIERS HANDBOOK

The range consists of the following:

Amplifiers:

1987 _____ 50 watt Super Lead Valve
1959 _____ 100 watt Super Lead Valve
2204 _____ 50 watt Master Volume Valve
2203 _____ 100 watt Master Volume Valve

Combos:

4010 _____ 50 watt Master Volume Valve
4104 _____ 50 watt Master Volume Valve
4103 _____ 100 watt Master Volume Valve
5005 _____ 12 watt Master Volume Transistor
5002 _____ 20 watt Master Volume Transistor
5010 _____ 30 watt Master Volume Transistor
5205 _____ 12 watt Transistor with Reverb
5203 _____ 30 watt Transistor with Reverb
4001 _____ 15 watt Studio Valve

Model 3005:

3005 _____ 12 watt Micro Stack

Congratulations !

I would like to thank you personally for selecting one of our amplifiers.

Our reputation is built on a total commitment to design and engineer the finest amplifiers available in the world, and to that end we have spared no effort in providing the very best in materials, and precision workmanship to allow extended years of outstanding performance.

Please be sure to return your registration card, so that we may enter your name in our roster of Marshall users.

Again, thank you sincerely.

A handwritten signature in cursive script that reads "Jim Marshall". The signature is written in black ink and is positioned above the printed name "Managing Director".

Managing Director

N.B. Please read warning list on page 16 before operating your new amplifier.

Introduction

For the past two decades, one name has been synonymous with the best in rock amplification. Marshall has now become a household name throughout the world as a symbol of precision acoustic engineering to be relied upon, not only for superlative sound quality, but also for high performance night after night.

Each amplifier chassis is constructed from steel, precision cut, punched, bent and seam welded to form a substantial, rigid foundation, strong enough to take all the knocks of the road.

All electronic components are selected and tested to out-perform their required functions, and the electrical hardware, such as switches, selectors, etc., comply to most international safety standards, to ensure the user is safe from the risk of electric shock.

The same applies to both the mains and output transformer that are designed and built to withstand full output for hour upon hour. To complete the electrical specification all valves are selected from the finest grades available.


After testing and adjusting, each chassis is assembled into cabinets made from finest quality birch ply, corner locked and r.f. bonded for immense strength and longevity.

After the black P.V.C. covering is bonded and stretched into place, A.B.S. corner protectors and air vents are riveted into position, creating a cabinet that is manufactured to an equal standard as that of the chassis.

The Master Volume and Super Lead amplifiers and combos cover the whole musical spectrum from the small practice amp to the full stage set-up, forming the basis of the classic Marshall range, which has become so renowned throughout the world.



Jim Marshall (Products) Ltd. operate a policy of continuous development and reserve the right to change specifications without prior notice.

Front Panel Functions 1987, 1959

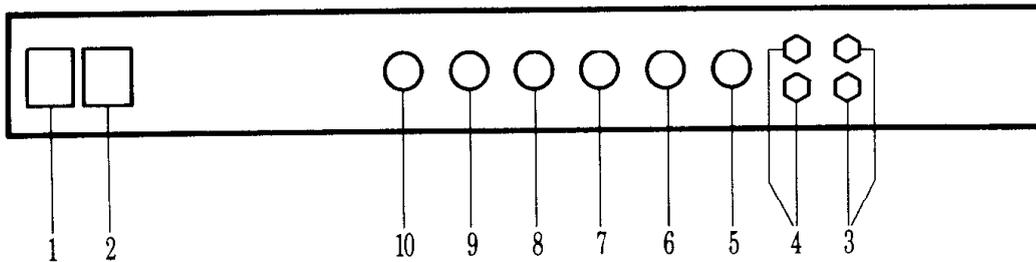

- | | | | |
|--------------------------|---|-----------------------------|---|
| 1. Power Switch | Controls total mains power to amplifier. | 5. Channel 2 Volume Control | Controls the overall output level of channel 2. |
| 2. Standby Switch | Controls H.T. supply to amp valves. Allows the filaments to remain heated during breaks. | 6. Channel 1 Volume Control | Controls the overall output of channel 1. |
| 3. Channel 2 Input Jacks | Connects instrument to amplifier. Top input high power, bottom input low power. | 7. Treble Control | Controls the high frequency content of the amplifier. |
| 4. Channel 1 Input Jacks | Top input high gain, bottom input low gain. This channel is treble boosted, therefore brighter than channel 2. With guitar plugged into channel 1 high input, amp may be linked to other amps by linking from low input channel 1 to high input channel 1 on next Marshall amp. | 8. Middle Control | Controls the middle register of the amplifier. |
| | | 9. Bass Control | Controls the low frequency content of the amplifier. |
| | | 10. Presence Control | Controls additional boost to the upper frequencies to add crispness and liveliness. |


Front Panel Functions 2204, 2203, 4010, 4104, 4103

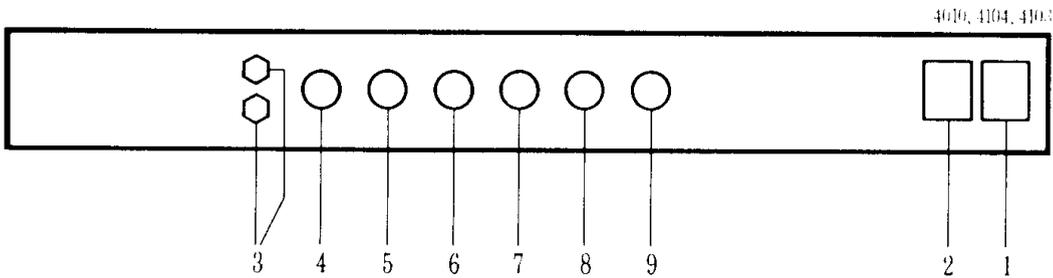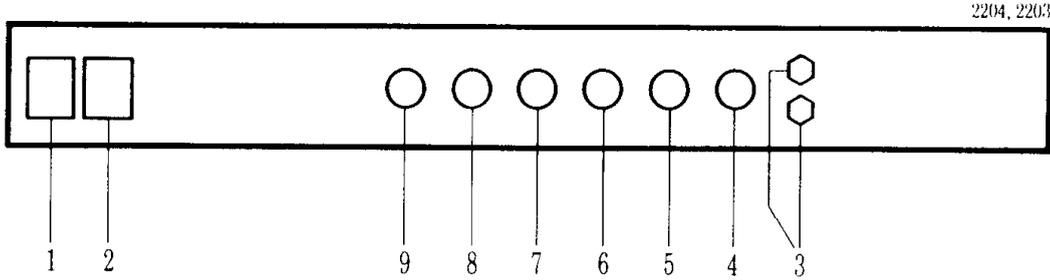


- | | | | |
|---------------------------|---|--------------------------|--|
| 1. Power Switch | Controls total mains power to amplifier. | 5. Master Volume Control | Controls the overall output of the amplifier. |
| 2. Standby Switch | Controls H.T. supply to amp valves. Allows the filaments to remain heated during breaks. | 6. Treble Control | Controls the high frequency content of the amplifier. |
| 3. High & Low Input Jacks | Connects instrument to amplifier (high input gives more volume than low input). | 7. Middle Control | Controls the middle register of the amplifier and at high levels will also modify the treble and bass. |
| 4. Pre-amp Volume Control | Controls the volume of the pre-amp hence the amount of overdrive, i.e. when control is on full, maximum overdrive will be achieved. | 8. Bass Control | Controls the low frequencies of the amplifier. |
| | | 9. Presence Control | Controls additional boost to the upper frequencies of the overall sound and adds crispness and liveliness. |

Rear Panel Functions 1987, 1959, 2204, 2203, 4010, 4104, 4103

1987, 1959, 2204, 2203

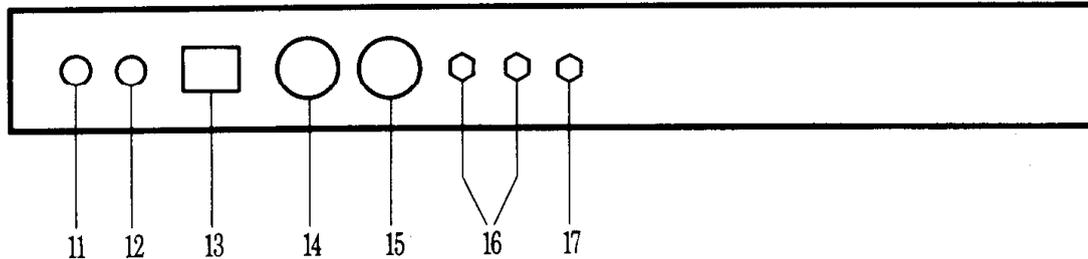

4010, 4104, 4103

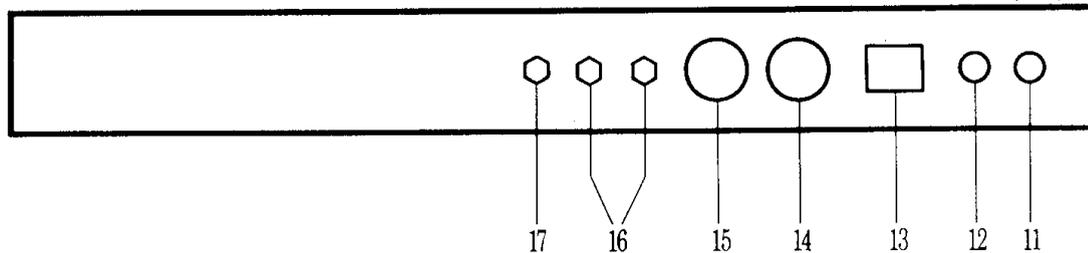


- | | | | |
|--------------------|--|------------------------------|---|
| 11. H.T. Fuse | See label for correct value. Only use correct value fuse. (Please note, on models 1987, 2204, 4104 and 4010 this item is reversed with component 12.) | 15. Output Selector | Matches amplifier output transformer impedance to loudspeaker load impedance, i.e. 4/8/16 ohms. (Speaker impedance usually marked on cabinet), if in doubt check with supplier. |
| 12. Mains Fuse | See label for correct value. Only use correct value fuse. (Please note, on models 1987, 2204, 4104 and 4010 this item is reversed with component 11.) | 16. Loudspeaker Output Jacks | Parallel connected jacks for loudspeaker connections. Speaker load must always be connected. If one or both sockets are used, total impedance must be matched to selector and must not be less than 4 ohms. |
| 13. Mains Input | Connects amplifier to power supply. (Please note, on models 1987, 2204, 4104, and 4010 the position of this component is at the extreme of the chassis.) | 17. D.I. Output | Jack socket carrying low level version of amplifier output, suitable for connection to recording and P.A. mixing desks, or into slave amplifying systems. |
| 14. Mains Selector | Matches amplifier output transformer to the incoming mains voltage. | | |

Operational Functions **NOTE!** Before switching on this unit it must be correctly earthed.

The super lead amplifiers 1987 and 1959 provide a very powerful rock sound. At lower levels the sound remains fairly clean, as the volume controls (5 or 6), are turned up, the natural distortion of the valve amp comes in. The tone may be shaped with controls 7, 8, 9 and 10. These controls work in conjunction with each other, hence it may be necessary to adjust more than one control to achieve the degree of variation required.

The master volume range will provide the overdriven sound at lower volumes by turning pre-amp control number 4 to maximum with master volume control number 5 at a lower level. For cleaner sounds, the pre-amp control (4), should be kept at a lower level than master volume control (5). The tone being set in the same way as models 1987 and 1959.

Diagram for linking models 1959 or 1987

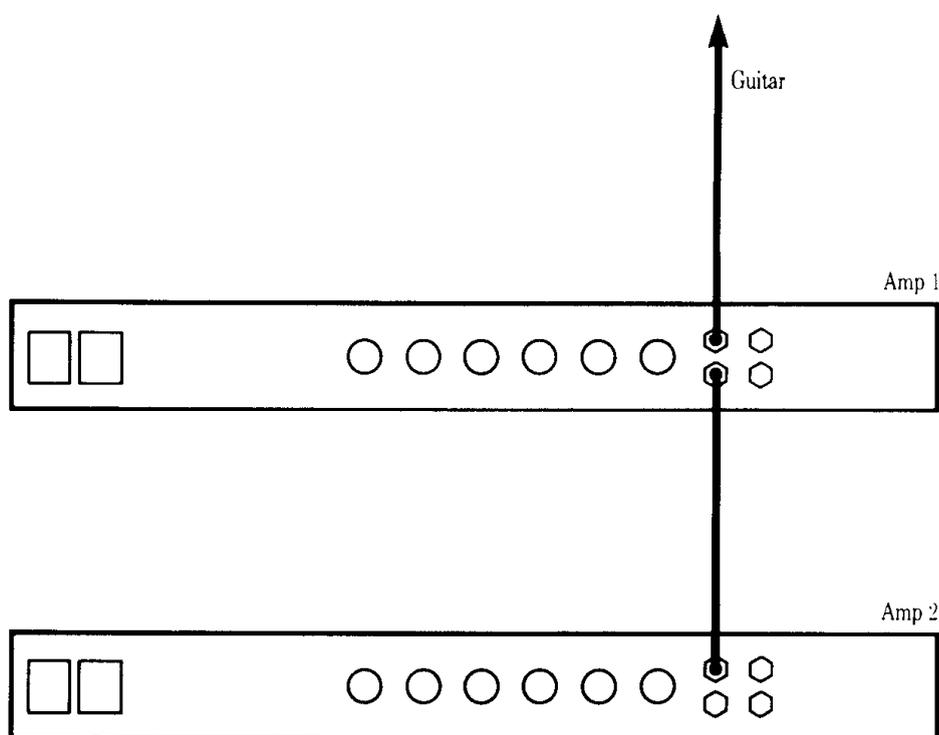

- Ensure internal or external loudspeakers are connected (16), and properly matched to the amplifier by correct usage of the impedance selector (15).
- Turn the volume controls to zero.
- Check that mains settings (14), correspond to mains supply and connect the amplifier to socket (13).
- Switch power on (1), and allow valves to heat up to working temperature.
- Connect instrument to input jack (3 or 4).
- Switch standby on (2).

Specification 1959

Measured at 1KHz. Controls set to maximum, top input unless otherwise stated.

Input Sensitivity	Channel 1 1mV. overload level 250mV. Channel 2 1.5mV. overload level 250mV. Bottom inputs have a 6dB. attenuation in sensitivity.
Power Output	Typical power at clipping, measured at 1KHz., average distortion 4% 115 watts R.M.S. into 4, 8, 16 ohms. Typical output power at 10% distortion 170 watts into 4 ohms.
Tone Range	Channel 1 has a 10dB/decade rising treble slope with automatic low volume brightness circuit. Channel 2 has flat response. Treble 10KHz. — 35dB. Middle 600Hz. — 9.5dB. Bass 50Hz. — 15dB. Presence 3KHz. — 6dB.
Power Supply Requirements	Mains input 120/220/240v. a.c. 40/60Hz. Max. consumption — 375 watts. Mains fuse 120v. — T4A. 220/240v. — T2A. H.T. Fuse T1A.
Valve Complement	Pre-amp and phase splitter valves V1, 2, 3 — ECC83, 12AX7. Output power valves V4, 5, 6, 7 — EL34, KT77.

Specification 1987

Measured at 1KHz. Controls set to maximum, top input unless otherwise stated.

Input Sensitivity	Channel 1 1mV. overload level 150mV. Channel 2 1.5mV. overload level 150mV. Bottom inputs have a 6dB. attenuation in sensitivity.
Power Output	Typical power at clipping, measured at 1KHz., average distortion 3% in excess of 50 watts R.M.S. into 4, 8, or 16 ohms. Typical output power at 10% distortion 90 watts into 16 ohms.
Tone Range	Channel 1 has a 10dB/decade rising treble slope with automatic low volume brightness circuit. Channel 2 has flat response. Treble 10KHz. — 26dB. Middle 600Hz. — 9.5dB. Bass 50Hz. — 15dB. Presence 3KHz. — 6dB.
Power Supply Requirements	Mains input 120/220/240v. a.c. 40/60Hz. Max. consumption — 175 watts. Mains fuse 120v. — T3A. 220/240v. — T2A. H.T. Fuse T500mA.
Valve Complement	Pre-amp and phase splitter valves V1, 2, 3 — ECC83, 12AX7. Power output valves V4, 5 — EL34, KT77.


Specification 2203, 4103 Measured at 1KHz. Controls set to maximum, top input unless otherwise stated.

Input Sensitivity	Low sensitivity input — 10mV. overload level infinity. High sensitivity input — 0.15mV. overload level max. 150mV., 1mV. min.
Power Output	Typical power at clipping, measured at 1KHz., average distortion 4% 115 watts R.M.S. into 4, 8, 16 ohms. Typical output power at 10% distortion 170 watts into 4 ohms.
Tone Range	Treble 10KHz. — 35dB. Middle 600Hz. — 9.5dB. Bass 50Hz. — 15dB. Presence 3KHz. — 6dB.
Power Supply Requirements	Mains input 120/220/240v. a.c. 40/60Hz. Max. consumption — 375 watts. Mains fuse 120v. — T4A. 220/240v. — T2A. H.T. fuse T1A.
Valve Complement	Pre-amp and phase splitter valves V1, 2, 3 — ECC83, 12AX7. Power output valves V4, 5, 6, 7 — EL34, KT77.

Specification 2204, 4104, 4010 Measured at 1KHz. Controls set to maximum, top input unless otherwise stated.

Input Sensitivity	Low sensitivity input 17mV. overload level infinity. High sensitivity input — 0.15mV. overload level max. 150mV. min. 1mV.
Power Output	Typical power at clipping, measured at 1KHz., average distortion 3% — in excess of 50 watts R.M.S. into 4, 8, or 16 ohms.
Tone Range	Treble 10KHz. — 32dB. Middle 500Hz. — 9.5dB. Bass 50Hz. — 15dB. Presence 3KHz. — 6dB.
Power Supply Requirements	Mains input 120/220/240v. a.c. 40/60Hz. Max. consumption — 175 watts. Mains fuse 120v. — T3A. 220/240v. — T2A.
Valve Complement	Pre-amp and phase splitter valves V1, 2, 3 — ECC83, 12AX7. Output power valves V4, 5 — EL34 — 6550.

Front Panel Functions 5010, 5002, 5005

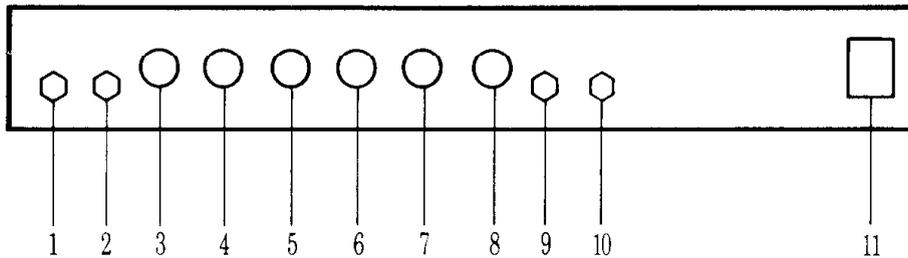

- | | | | |
|-------------------|--|----------------------------|--|
| 1. High Input | Connects instrument to amplifier (high powered input). | 8. Presence Control | Controls additional boost to the upper frequencies of the overall sound and adds crispness and liveliness (not included on models 5002 and 5005). |
| 2. Low Input | Connects instrument to amplifier (low powered input). | 9. Line-out Jack Socket: | Jack socket providing low level version of the amplifier output. Suitable for connection to recording or P.A. mixing disk or other outboard systems. |
| 3. Pre-amp Volume | Controls the level of pre-amplification (high settings for overdrive, low settings for cleaner sound). | 10. Headphone Jack Socket: | Output for connection to headphones (mutes internal loudspeaker). |
| 4. Master Volume | Controls the overall output level of the amplifier. | 11. Mains Power Switch: | On/off for mains power to the amplifier. |
| 5. Treble Control | Controls the high frequency content of the amplifier. | | |
| 6. Middle Control | Controls the middle register of the amplifier. | | |
| 7. Bass Control | Controls the low frequencies of the amplifier. | | |

NOTE! On models 5005 and 5002 the mains lead is attached. On model 5010 the mains lead is plugged into the socket on the back panel of the amplifier.

Operational Functions 5010, 5002, 5005 **NOTE!** Before switching on this unit it must be correctly earthed.

Connect the guitar to input (1 or 2). The high input for louder, more distorted playing or the low input for a cleaner, less distorted sound. The pre-amplifier control (3), should be set to achieve the type of overdrive required — in conjunction with the Master Volume (4). For clean sounds, the Master Volume (4), should be set high and the pre-

amp (3), low. For distorted sounds the pre-amp (3), should be set high and the Master Volume (4), should be lower — depending on the overall volume required. Set the tone controls (5, 6 and 7), to achieve type of sound required, using the presence control (8), where applicable, to further colour the sound.

Specification 5005

Measured at 1KHz. Controls set to maximum, top input unless otherwise stated.

Input Sensitivity	Low 0.2mV. High 0.1mV
Tone	Treble 5KHz. — 30dB. mid down. Middle 450Hz. — 17dB. treble and bass full. Bass 100Hz. — 25dB. mid down.
Output	12 watts into 8 ohm 10 inch Celestion loudspeaker. Min. handling power 25 watts. H.P. output approximately 100mW. Line-out approximately 600mV. R.M.S. at clipping.
Power Supply	Internally set for 120/220 or 240v. 40/60Hz. 35vA.
Mains Fuse	120v. — T500mA. 220/240v. — T160mA.

Specification 5002

Measured at 1KHz. Controls set to maximum, top input unless otherwise stated.


Input Sensitivity	Low 0.2mV. High 0.1mV
Tone	Treble 5KHz. — 30dB. mid down. Middle 450Hz. — 17dB. treble and bass full. Bass 100Hz. — 25dB. mid down.
Output	20 watts into 8 ohm 10 inch Celestion loudspeaker. Min. handling power 35 watts. H.P. output approximately 100mW. Line-out approximately 600mV. R.M.S. at clipping.
Power Supply	Internally set for 120/220 or 240v. 40/60Hz. 50vA.
Mains Fuse	120v. — T500mA. 220/240v. — T500mA.

Specification 5010

Measured at 1KHz. Controls set to maximum, top input unless otherwise stated.

Sensitivity	All controls maximum 0.35mV. R.M.S. Maximum input level 1.7v. R.M.S.
Tone Swing	Bass 100Hz. — 15dB. Middle 500Hz. — 25dB. Treble 16dB. (mid max.) 42dB. (mid max.)
Power Output	30 watts R.M.S. into 4 ohm load. I.C. and transistor construction.
Loudspeaker	Specially designed 12 inch 70 watt R.M.S. 4 ohm.
Power Requirement	Mains input — internally set. 220/240v. 40/60Hz. 110/120v. 40/60Hz. Internal mains fuse 110/120v. — T1A. 220/240v. — T500mA. Maximum input power 65vA.
H.P. Output	Approximately 100mW. into 4/8 ohms.
D.I. Output	Approximately 600mV. at 30 watts R.M.S. output level.

Front Panel Functions 5205

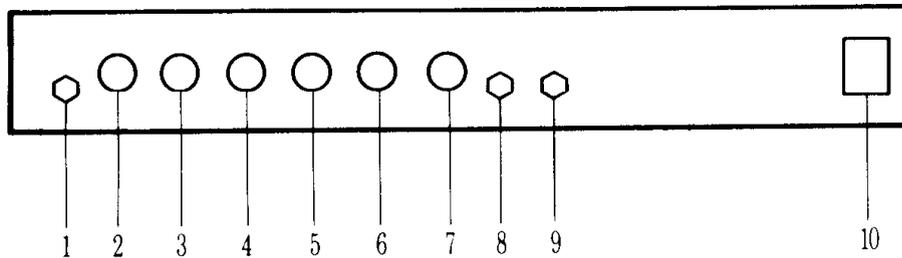

- | | | | |
|--------------------|---|------------------------|---|
| 1. Input Jack | Connects instrument to amplifier. | 7. Reverb Control | Controls the depth of the reverb effect. |
| 2. Pre-amp Control | Controls the level of pre-amplification, (high settings for overdrive, low settings for cleaner sound). | 8. Line-out Socket | Provides a low level version of the amplifier output. |
| 3. Master Volume | Controls the overall output level of the amplifier. | 9. Headphone Socket | Output for connection of headphones, mutes internal loudspeaker.
<i>(NOTE! Please use stereo headphones only).</i> |
| 4. Treble Control | Controls the high frequency content of the amplifier. | 10. Mains Power Switch | On/Off for mains power to amplifier. |
| 5. Middle Control | Controls the middle register of the amplifier. | | |
| 6. Bass Control | Controls the low frequencies of the amplifier. | | |

Operational Functions 5203 and 5205

Connect the guitar to the input (1) and switch on the main power switch (10) - (11) on model 5203. The pre-amp control (2) should be set to achieve the type of overdrive required — in conjunction with the Master Volume (3) should be set high and the pre-amp (2) at low. For distorted sounds, the pre-amp (2) should be set high and the Master Volume (3) set lower, depending on the overall volume required.


The tone controls (4, 5 and 6) should be used to set the type of sound required, (experimentation is the

best idea). The reverb effect is introduced by using control (7) on the 5205, or (8) on the 5203. Model 5203 also has a presence control (7) to further colour the sound.

Stereo headphones may be connected to socket (9) and will automatically mute the loudspeaker.

For recording or other similar functions, the line-out socket (8) on 5205, or (10) on 5203 could be utilised to provide a low level version of the sound being produced by the amplifier.


Front Panel Functions 5203

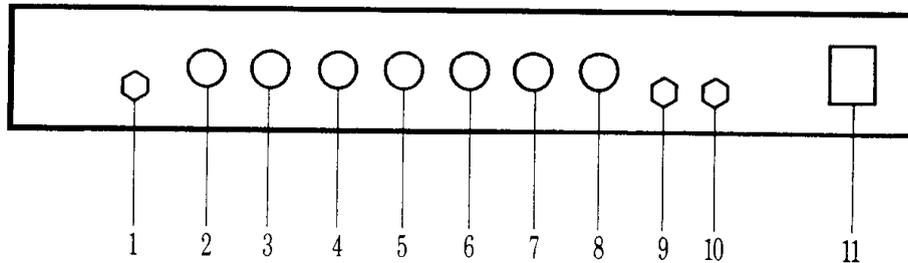

- | | | | |
|---------------------|--|------------------------|---|
| 1. Input | Connects instrument to amplifier. | 8. Reverb Control | Controls the depth of the reverb effect. |
| 2. Pre-amp Volume | Controls the level of pre-amplification (high settings for overdrive, low settings for cleaner sound). | 9. Headphone Socket | Output for connections of stereo headphones (mutes internal loudspeaker). |
| 3. Master Volume | Controls the overall output level of the amplifier. | 10. Line-out Socket | Provides a low level version of the amplifier output. Suitable for connection to recording or P.A. mixing desks, or to drive a slave amplifying system. |
| 4. Treble Control | Controls the high frequency content of the amplifier. | 11. Mains Power Switch | On/Off for mains power to amplifier. |
| 5. Middle Control | Controls the middle register of the amplifier. | | |
| 6. Bass Control | Controls the low frequency content of the amplifier. | | |
| 7. Presence Control | Controls additional boost to the upper frequencies of the overall sound and adds crispness and liveliness. | | |


NOTE! On model 5205, the mains lead is attached. On model 5203, the mains lead provided should be plugged into the socket on the back panel of the amplifier.

Front Panel Functions 4001

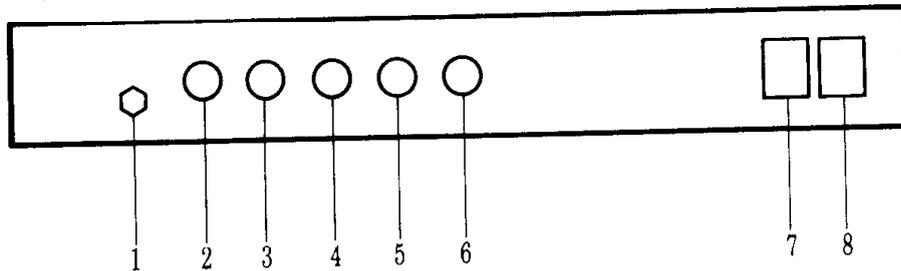

- | | | | |
|-------------------|---|-------------------------|---|
| 1. Input | Connects instrument to amplifier. | 6. Output Level Control | Controls the overall volume level of the amplifier. |
| 2. Gain Control | Controls input level (high settings for overdrive, lower settings for clean). | 7. Standby Switch | Controls H.T. supply to amp valves allowing the filaments to remain heated during breaks. |
| 3. Treble Control | Controls the high frequency content of the amplifier. | 8. Power Switch | Controls total mains power to amplifier. |
| 4. Middle Control | Controls the mid range of the amplifier. | | |
| 5. Bass Control | Controls the low frequencies of the amplifier. | | |

Rear Panel Functions 4001

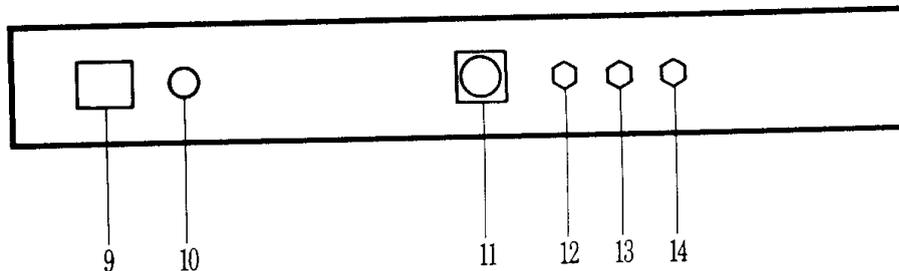

- | | | | |
|------------------------------|--|----------------------|--|
| 9. Mains Input | Connects the amplifier to mains power supply. | 13. Headphone Output | Output for headphones (only operative when speaker is disconnected), alternatively the internal speaker may be connected to this output for attenuated output. |
| 10. Mains Fuse | See label on the back of the amp for correct fuse value. | 14. Line-out | Unbalanced line-out for connecting the amplifier to unbalanced outboard equipment such as slave/speaker systems, etc. |
| 11. Balanced Line-out Socket | XLR type socket for connection to balanced line outboard equipment such as mixing console, etc., fully floating and giving 0dBm. output. | | |
| 12. Speaker Output | Output for connection of internal or external loudspeaker 8 ohm nominal impedance giving 15 watts R.M.S. | | |

Operational Functions 4001

NOTE! Before switching on this unit it must be correctly earthed.

Connect the amplifier to the mains by using lead provided into socket (9). Switch on power switch (8), and set amp controls to zero. Connect the guitar to input (1), and switch on standby (7).

Many different sounds can be achieved using the tone and volume controls. For overdrive, gain control (2), should be kept higher than output level (6). A variety of cleaner sounds can be achieved by keeping output level (6), higher than gain control (2).

The speaker may be disconnected without any


damage to the amplifier section allowing the amp to be used as a valve pre-amplifier via the line out socket (14). The internal speaker can be connected to the headphone socket (13), which gives a very low signal through the speaker — allowing the amp to be used at maximum volume and giving full-bodied valve distortion. The internal speaker must be disconnected (12), to allow the headphone socket (13), to be used with headphones.

Specification 4001

Measured at 1KHz. Controls set to maximum, top input unless otherwise stated.


Input	Sensitivity	3mV.
	Overload	1.2v. R.M.S. 1KHz.
	Impedance	Approximately 1 megohm.
	Typical sensitivity	Gain, treble, middle, bass midway 55mV.
	E.Q.:	
	Treble, middle, bass controls	of overlapping slopes and medium interaction.
	Bass	50Hz. +10dB. — 10dB.
	Middle	500Hz. +13dB. — 20dB.
	Treble	10KHz. +10dB. — 8dB.
	All E.Q. controls	set at and measured from midway position. Treble control range increases with decreasing middle control to a maximum of 35dB. swing. Brightness compensation circuit on lower settings of volume control.
Best square wave response:	Treble (1) Middle (3) Bass (5).	
Power Output	Typically	15 watts R.M.S. into 8 ohms at 1% T.H.D.
		20 watts R.M.S. into 8 ohms at 10% T.H.D.
		29.5 watts R.M.S. into 8 ohms at 40% T.H.D. (maximum amplifier saturation).
Headphone Output	Typically	60mW. into 8 ohms at clipping.
Unbalanced Line Output	Typically	0dBm. (0.775v.) into 600 ohms — 1.4v. R.M.S. into 10 kilohms at clipping.
Balanced Direct Output	Transformer coupled balanced XLR type output —	0dBm. into 600 ohms — Pin 1 earth (floating) Pin 2 + VE Pin 3 — VE.
S/N Ratio	Typically	— 75dB. (flat response).
	Typically	— 63dB. (maximum sensitivity).
Master Volume Circuit	Integral to power amplifier section, effectively reducing power headroom whilst retaining typical harmonic relationship as close as possible to total power output, infinitely variable.	
Tube Complement	V1, V2 —	ECC83/12AX7.
	V3, V4 —	6V6.
Power Input	Internally set for	110/120v. or 220/240v. 50/60Hz.
	Quiescent (Standby off)	18vA.
	Clipping	46vA.
	Maximum (full overload)	66vA.
Internal Loudspeaker	12 Inch Marshall Celestion driver especially designed for this amplifier to as near original Celestion G12 (Alnico) specification as possible, but with 60 watts R.M.S. power handling at 8 ohms.	

Front Panel Functions Model 3005 12 Watt Stack

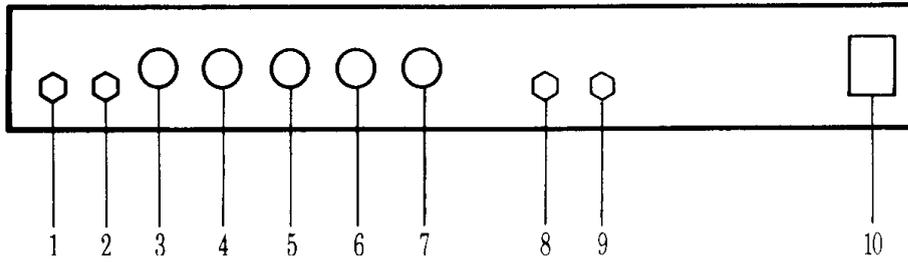

- | | | | |
|-------------------|---|----------------------|---|
| 1. High Input | Connects instrument to amplifier, (high powered input). | 6. Middle Control | Controls the middle register of the amplifier. |
| 2. Low Input | Connects instrument to amplifier, (low powered input). | 7. Bass Control | Controls the low frequency content of the amplifier. |
| 3. Pre-amp Volume | Controls the level of pre-amplification, (high settings for overdrive, low settings for cleaner sound). | 8. Line-out Socket | Provides a low level version of the amplifier output. Suitable for connection to recording or P.A. mixing desk etc. |
| 4. Master Volume | Controls the overall output level of the amplifier. | 9. Headphone Socket: | Jack socket for connection of headphones (mutes the loudspeakers). |
| 5. Treble Control | Controls the high frequency content of the amplifier. | 10. Power Switch: | On/off for mains power to the amplifier. |

Rear Panel Functions.

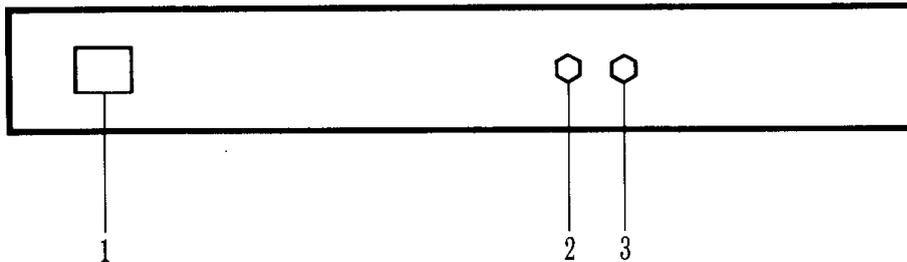

- | | |
|----------------------------------|--|
| 1. Mains Input | Connects the amplifier to the mains power supply. |
| 2. & 3. Loudspeaker Output Jacks | For connection of loudspeakers (not less than 8ohms) N.B. The speakers supplied are 16ohms each cabinet. |

Operational Functions 3005

Connect the loudspeakers to the rear of the amplifier section, (rear panel sockets 2 and 3). Connect the guitar to input, (number 1 for louder more distorted playing, or number 2 for cleaner sound). The amplifier should be switched on using mains switch (9).

The pre-amp control (3) should be set to achieve the type of overdrive required — in conjunction with the Master Volume (4). For clean sound, the Master (4) should be set high and the pre-amp (3) low. For distorted sounds, the pre-amp (3) should

be set high and the Master Volume (4) set lower, depending on the overall volume required.

The tone controls (5, 6 and 7) should be used to set the type of sound required, (experimentation is the best idea).

Stereo headphones may be connected to the rear panel (socket 4) and will automatically mute the loudspeakers. The line-out socket (8) can be used to connect to a mixing desk or recording device, or also as a slave output to drive another system if required.

Cabinets:-

- 1 × 10" Angled front 25 Watt
- 1 × 10" Straight fronted 25 Watt

WARNING PLEASE READ THE FOLLOWING LIST CAREFULLY

- A. ALWAYS fit a good quality mains plug, conforming to the latest B.S.I. standards.
- B. ALWAYS wire the plug according to the colour code attached to the mains lead.
- C. NEVER, under any circumstances, operate the amplifier without an earth.
- D. NEVER attempt to bypass the fuses or fit ones of the incorrect value.
- E. NEVER attempt to replace fuses or valves with the amplifier connected to the mains.
- F. DO NOT attempt to remove the amplifier chassis, there are no user serviceable parts.
- G. ALWAYS have this equipment serviced or repaired by competent qualified personnel.
- H. NEVER use an amplifier in damp or wet conditions.
- I. DO NOT switch the amplifier on without the loudspeaker connected, and ensure that the impedance selector is correctly matched to the speaker or speakers. (Valve models only.)
- J. DO NOT obstruct airflow around heatsinks (where applicable).
- K. PLEASE READ this instruction manual carefully before switching on.

ALWAYS ENSURE THAT MARSHALL APPROVED COMPONENTS ARE USED AS REPLACEMENTS

Amplifier Cabinet Set-Ups

AMPLIFIER	CABINET	AMP IMP. SETTINGS
1959, 2203, 2210	1 1960A or 1982A 1 1960A + 1960B (or 1982A + 1982B)	16 ohms 8 ohms
1987, 2204, 2205	1 1936 2 1936 1 1960A 1 1960A + 1960B	8 ohms 4 ohms 16 ohms 8 ohms
3210	1 1965A or 1966A 1 1965A + 1965B (or 1966A + 1966B)	8 ohms
4210, 4010	1 1933	8 ohms
4211, 4212, 4104 & 4103	1 1936	4 ohms